

Tesla Diagnostic Adapter Cables Connection Guide

Model S & Model X

Packing List



TLAN001

TCAN001

TCANC002

Aadpter cable	Supported Model	Model Year	Connection Port	Connection Port Location	Function
TLAN001	Model S/Model X	All	X861	On the back of the intrument cluster	Activate factory Mode
		After Sept 2015	X863	Below the central control screen	Perform diagnosis for LAN related systems
Before Sept 2015		On the left side of the intrument cluster			
TCAN001		After Sept 2015	x437	Below the central control screen	Perform diagnosis for CAN related systems
TCAN002	Before Sept 2015				



TLAN001 Connection Guide


Required Tools (not include)



Preparation Before Disassembly

Warning: Be sure that vehicle power is off before disassembling.

1. Tap the lower-left corner of the central control screen in the following sequence: vehicle icon → **Safety & Security** → **POWER OFF**.
2. Disconnect the negative cable of the 12V battery at the front compartment.

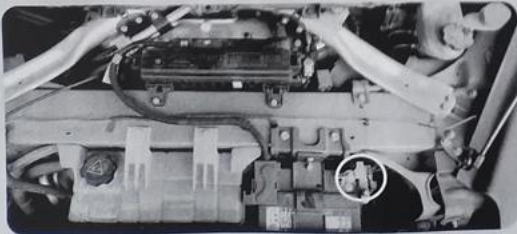

3. Disconnect the first responder loop on the right side of the 12V auxiliary battery.

